



# RCA 10 Viking Pro The hole thing Replacement

It was placed In water and now will not turn on

Written By: Rick Thompson

## Step 1 — The hole thing



- Will not turn on

## Step 2



- Was put in a little bit of water

## Step 3



- It has been charged for two days straight

## Step 4



- It was dry by the time I got two it

---

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 03:55:34 PM.